

Getting started with Audio Board

This document provides instructions on how to operate the audio board.

Note: Audio Board requires 9V battery (Not Included)



Getting started with Audio Board


Getting Started

There are two ways to play sounds on the audio board, Wireless Remote and with the push button.

Let's play some sounds with the push button. Press the push button on the board and cycle through the sounds.

Now, let's play some sounds from the train remote.

Flip the channel selection switch to the desired position. In this case we will set the board to channel 1. Turn on the audio board by flipping the power switch, you will notice **D3 LED** turn red.

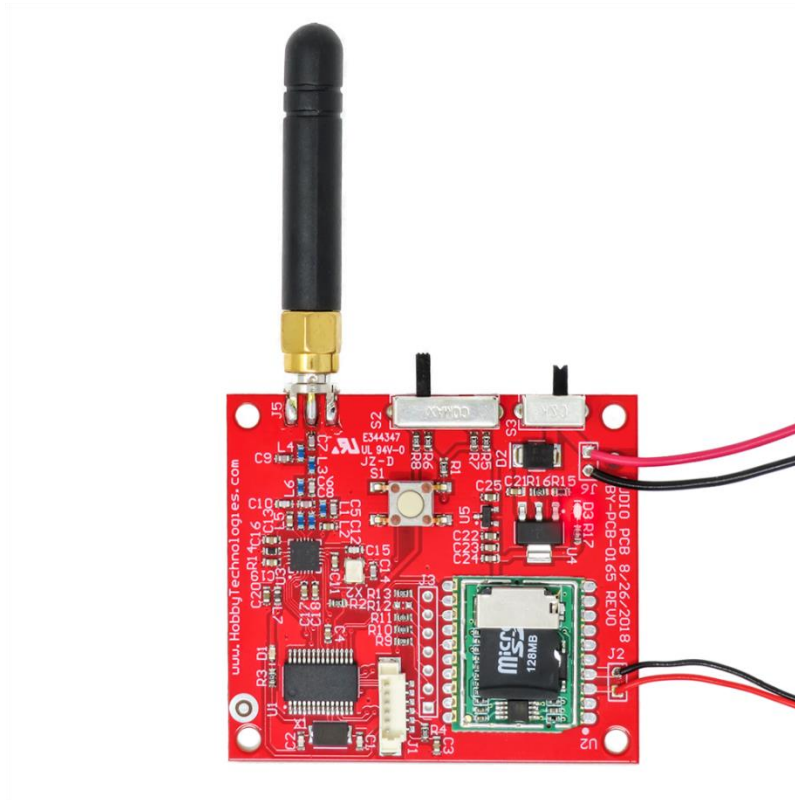

Getting started with Audio Board

Next turn on your train remote and change to channel one.



Press the buttons 1-6 on the train remote and play the six different sounds stored on the audio board.

Note: The Wireless Remote and Audio Board must be on the same channel for the sounds to play.

To change the sounds on the SD card read the **[changing_sounds_on_sd_card.pdf](#)** document.